

How to affix the rubber feet



Body

Panel


Hardware Bag



1. Rubber Feet
(4pcs/sheet)



2. Extruded body

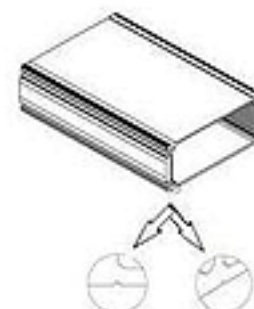

Rubber Feet Adhesive Line



3. Per the photo,
Affix the rubber feet in the extruded body.



4. Done